




RHINO ADVANCED

USER MANUAL

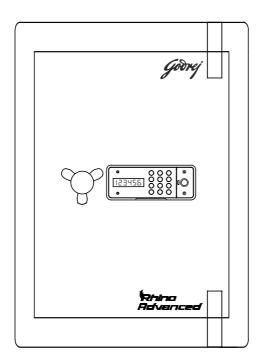

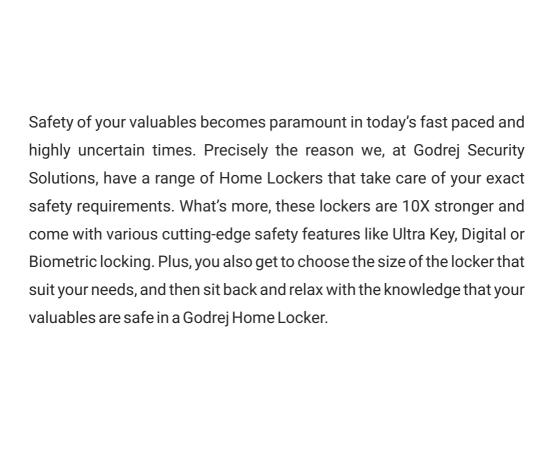



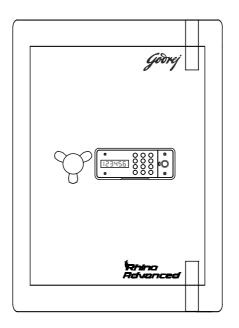

Digital



100X^{*} Stronger than a Wooden Cupboard



USB & KEY for emergency access



Electronic controlled lock



Anchoring provision for installation



CONTENT

1	Package Contents	.01
2	Important Instructions	.01
3	Know your Product	02
4	Home Mode Operation	03
5	Trick to change the Master Code	04
6	Hot Key	05
7	Testing the Battery Level	05
8	Simple Program to Access the Programming	06
9	In Case of Emergency use the Override Key	08
10	USB Access	08
11	Error Messages	09
12	Replacing the batteries	10
13	Tools Required	11
14	Mounting	11
15	Information on E-waste Handling and Management	.14



1. PACKAGE CONTENT



Locker (1 No.)



Warranty Card (1 No.)



User Manual (1 No.)



Mounting Screws (4 Nos.)



Override Keys (2 Nos.)



1.5V AA Alkaline Battery (4 Nos.)

2. IMPORTANT INSTRUCTIONS



The locker is in home mode by default. Ensure locker function in Home Mode only. In case of any issue with mode functionality, please follow instruction on the page 7 and refer **section e (Operation mode).**



Make sure the Locker is anchored properly as it can fall and hurt people and property.



Please keep this manual and override keys in a safe place (NOT INSIDE THE LOCKER).



DO NOT use any liquid while cleaning the keypad/ fascia. You could use a damp cloth if required.



DO NOT place any liquid on top of the locker, a spill on the keypad/fascia may render the locker inoperable.



DO NOT overstuff the locker or you can damage the motor mechanism or the contents.



For security purposes, you should change the factory default code i.e. Personal Code and Master Code as soon as possible. Godrej Security Solutions shall not be responsible for any theft caused by such negligence.





DO NOT open the back cover or try to repair the locker yourself. In case of any problem contact our Call Center at 1800 20 999 55.

1



3. KNOW YOUR PRODUCT

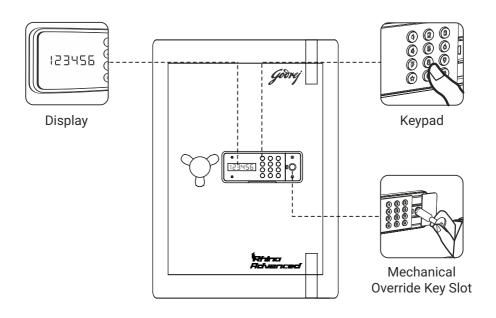

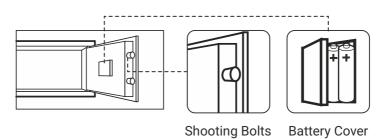



4. HOME MODE OPERATION



To open the locker: Enter the correct personal code. The display shows status

"OPENED", after entering correct personal code the solenoid bolts are unlocked for

6 sec. Rotate the knob anticlockwise to open the safe.

To lock the locker: Close the door and rotate the knob clockwise.

Note: The master code and personal code can only be used to unlock the locker.

How to change the personal code in Home mode

1 Open the locker.



2 Press * twice and the display will show "PROG".

3 Press '68 #' and the display will show "NEU".

4 Enter the new code and press #. That will Close the Locker

Note: Default Personal Code is "1234".



5. TRICK TO CHANGE THE MASTER CODE

1. Open the locker.

neu

 Press * twice and the display will show "PROG". Then, enter the original Master code. The factory set Master code is 800000.

The display will now show "NEU".

ACA IN

Next, Enter the 6 digit code of your choice. The display show "AGAIN".
 Now, enter the code again and press # key to confirm.

aone

 The display will show "DONE" to indicate that the new Master code has been set up successfully.

WARNING: For security purposes, you should change the factory default code as soon as possible. Godrej Security Solutions shall not be responsible for theft caused by such negligence. Do not use Function code for the new

Master code (EX:751019)

Stop your code from being displayed and compromise security

1. First, Open the locker using your Personal Code.

PF 85

- 2. **Press** * twice and the display will show "PROG".
- 3. When **"PROG"** disappears, **press 751019** within 5 seconds.

ו 1300

- 171300 will appear. Now, with the first digit flashing press (0)
 then press # once. The display will go blank.
- Close the locker (you will have to press your personal code to lock the door).
- Check if this feature is activated by entering Personal Code, You will see that "---" appears instead of your personal code.



6. HOT KEY - VIEWING/NOT VIEWING PASSWORD WHILE KEYING IN

If your lock is set so that your code appears every time and you do not want it to appear for that one time, you can **press (0)** then **#** key before your code. Only dashes will appear for that one time. The next time you press your code, it will appear as usual.

Likewise, if your lock is set so that your code never appears, you can simply **press (9)** then # and your code will appear for that one time only.

7. TESTING THE BATTERY LEVEL

You can test the Battery levels either with the door opened or closed.

· Press # key.

68-X I

• The display will show "bA-HI" or "bA-LO".

bR-Lo

• "bA-LO" means that you need to replace the batteries.



8. SIMPLE PROGRAM TO ACCESS THE PROGRAMMING

· Open the locker

PF 86

- · Press * twice, the display will show "PROG"
- Press **751019** while the word "**PROG**" disappears



- The current setup will appear with the first digit flashing
- All 6 sections must be entered within 10 seconds. You can change one or more sections, but all 6 sections must be entered. To keep a section programmed as it is currently set, simply press the same numbers that are currently displayed for that section and **press** #.
- The display will go blank

To set up the different features listed below, you must first decide how you want the locker to function.

Section a (1st Digit) Code Appearance on Display

Press 0: If you DO NOT want your code to appear on the display (only dashes will appear) with beep sound when you press each key button (Default).

Press 1: If you want your code to appear each time you press your code and then flash for verification one time, with beep sound when you press each key button.

Press 2: If you want your code to appear each time you press your code, with beep sound when you press each button.

Section b (2nd Digit) Preferred Number of Digits in your Code

Personal code can be 4-6 digits.

Press 4: To use a 4-digit code.

Press 5: To use a 5-digit code.

Press 6: To use a 6-digit code.

Press 7: To choose the length of code (4-6 digits) when you set the code (Default).



Section c (3rd Digit) Lockout Delay

If the wrong code is entered 4 times in a row, the touch pad will shut down for a length of time that you set. This is to deter someone from opening your locker by keying in a random number.

You must pick one of these three options:

Press 0: For no Lockout Delay.

Press 1: For a 15 minute delay (Default).

Press 2: For a 30 minute delay.

Section d (4th Digit) Master Code

The Master code will open the locker if you happen to lose the code and override keys. The Master code is preset at the factory.

Press 2: To turn OFF the Master code feature.

Press 3: To turn ON the Master code feature (Default).

Section e (6th Digit) Operational Mode

This feature allows you to change operational mode. Ensure operational mode for the locker is Home Mode.

Press 0: To set the Home Mode. (Default)

Press #: Thrice to exit Programming Mode.



9. IN CASE OF EMERGENCY USE THE OVERRIDE KEY



1 Open the keyhole.



2 Use one of the override keys and insert it into the cylinder.

Turn the key Anticlockwise and then rotate the knob anticlockwise to open the locker."

 


3 While the door is open and the key is still turned, follow the instructions to set your personal code.

Note: When you set the new personal code, rotate the key to the locked position, so that it can be removed. Your new personal code will still remain.

WARNING: Keep the override keys in a safe place other than inside the locker. These keys are to be used in case of emergency.

10. USB ACCESS - TECHNOLOGY ALWAYS HELPS



In case of low battery, a regular USB wire connected to a power bank can be inserted in the slot available on the lock panel. This will energise the locker by using power from the USB source*. The user can then enter the code, unlock the locker and replace the battery.

^{*}This does not charge the locker batteries. You will still need to replace batteries.



11. FREE YOURSELF FROM THE ERROR MESSAGES

Listed below are error codes that you might encounter:

Error

This means that you have pressed an incorrect personal code. You need to Verify your personal code and try again. If you get this error four times consecutively, the keypad will lock out for 0/15/30 minutes.

HOLd IS

This means that the locker has entered the lockout period. You will not be able to open the locker during the lockout period. However, by pressing any key during this period you can see how much time is left until the lockout is over. If your personal code still doesn't work, use the override keys to reset the locker.

(see "TO ACCESS THE PROGRAMMING" section 3)



12. REPLACING THE BATTERIES



1. Open the Locker.



2. Remove the battery cover by unscrewing the back panel.



Remove all the four used batteries.



4. Replace the batteries with four 1.5V AA size alkaline batteries.



5. Put back the battery cover.



Put back the screws to secure the battery cover.




 Keeping the door open, test the locker to make sure it works perfectly fine.




8. **V.IMP.** Dispose the used batteries in an environment friendly way.



13. TOOLS REQUIRED

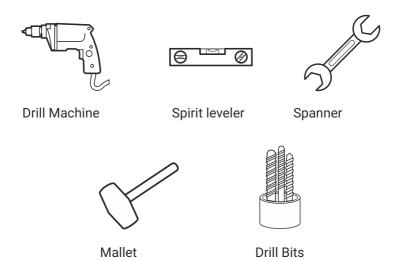

14. MOUNTING - DO IT RIGHT TO KEEP TROUBLE OUT

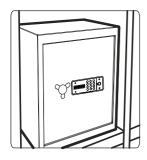


 Use the spirit leveler to check if the locker is evenly placed on the ground or against the wall or inside the wardrobe (depending on where it is to be grouted). In case it's not even then choose a different location for grouting.



2. To make your work easy the Spirit leveler lets you know precisely if the locker is evenly placed.




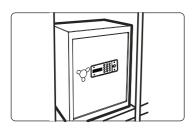


 Next, make markings on the ground or the wall or inside the wardrobe through the holes inside the locker




 Then, Drill holes into the ground or the wall or the inside of the wardrobe.

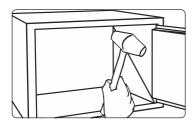


Fix the locker firmly by hammering the anchoring bolts (provided in the kit) through the holes.

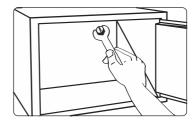

6. Finally, tighten the anchoring bolts with a spanner and it's done.

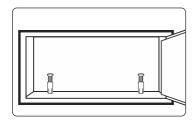

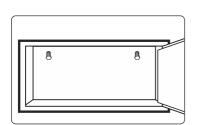

Mounting Tips

The locker may be either mounted to a wall or the inside of a cabinet or on the floor. When mounting to a wall or cabinet, be sure of the load bearing capacity so as to hold the weight of the locker and its contents.

(Negligence in proper mounting could result in the locker falling and causing damage to property and people.)



Mounting through the bottom of the locker:

- · Check the exact type of floor, whether it's wood, tile, concrete or anything else.
- · Get the appropriate anchors for the particular type of floor
- · Check and mark the location on floor for concealed wires or pipes
- Drill the appropriate size hole for your anchors
- Once done, mount the locker and make sure that's it is secure to the core
- You can even mount on the top of a cabinet. For that you may want to use carriage bolts through the top of the cabinet.
- DO NOT mount the locker on a shelf in a cabinet or closet without anchoring to a wall behind the locker for optimum safety.

Mounting through the back of the locker:

- To begin with, check the wall or cabinet and ensure that they are structurally strong.
- Request someone to help you in holding the locker during mounting.
- · Check the exact location for concealed wires or pipes.
- Mark the surface and drill holes for the anchors you will be using.
- · Have someone hold the unit and then anchor the locker to the wall.
- To ensure the installation, test the strength of the mounted locker so that it will not fall off the wall or cabinet.
- DO NOT place the locker on a shelf unless it's proper mounting into a wall.



15. INFORMATION ON E-WASTE HANDLING AND MANAGEMENT

Dear Customer,

The Ministry of Environment and Forest and Climate Change have published The E-waste (Management) Rules 2022, which came into effect from 1st day of April 2023.

- E-waste means electrical and electronic equipment, including solar photo-voltaic modules or panels or cells, whole or
 in part discarded as waste, as well as rejects from manufacturing, refurbishment and repair process.
- These rules shall apply to every manufacturer, producer, refurbisher, dismantler and recycler involved in
 manufacture, sale, transfer, purchase, refurbishing, dismantling, recycling and processing of e-waste or electrical or
 electronic equipment listed in Schedule-I of the rules including their components, consumables, parts and spares
 which make the product operational but shall not apply to
 - (a) Waste batteries as covered under the Battery Waste Management Rules 2022
 - (b) Packaging plastics as covered under the Plastic Waste Management Rules 2016
 - (c) Micro enterprises as defined in the Micro, Small and Medium Enterprises Development Act, 2006
 - (d) Radio-active wastes as covered under the provisions of the Atomic Energy Act, 1962 and rules made thereunder.
- Under these rules, specific roles and responsibilities are defined for manufactures, producers, bulk consumers, refurbishers and recyclers. Under Extended Producer Responsibility any producer of electrical or electronic equipment as given in Schedule-I for meeting recycling targets as per Schedule-III and Schedule -IV, only through registered recyclers of e waste to ensure environmentally sound management of such waste.
- E-waste is to be managed in an environmentally sound manner which means, taking steps to ensure that health and environment are protected from adverse effects of hazardous substance contained in such wastes.
- Rule 6 of the E-waste (Management) Rules 2022 interalia states that the producer of electrical and electronic
 equipment listed in Schedule -I shall be responsible for creating awareness through, media, publications,
 advertisements, posters or by any other means of communication.
- Rule 16 of the E- Waste (Management) Rules 2022 states reduction in the use of hazardous substances in the manufacture of electrical and electronic equipment and their components or consumables or parts or spares and every producer shall comply with the requirements under the rule.
- All consumers of electrical and electronic equipment irrespective of their status as bulk consumers or not, shall ensure
 that e-waste generated by them is channelized through registered recyclers or is returned to the pickup/take back
 services provided by the producers and recyclers. Please refer to our website https://www.godrej.com/godrejsecurity-solutions#GreenThink under the 'Green Think' section of Godrej Security Solutions Division Page for more
 details on registered recyclers and collection centers/pick up points of the company.
- All our products intended to be recycled under the category of e-waste (as defined above) carry a label or stamp of the
 WEEE symbol (A wheelie bin with a cross), which states that it falls under the hazardous waste category and is not to
 be disposed of along with normal garbage.



We seek your support in ensuring environmentally sound management of e-waste and aid us in sustaining our earth's natural resources and maintaining the earth's green cover intact for the benefit of our future generations.



NOTES

RECORD OF PURCHASE

Please fill your details below for future reference:	
Date of Purchase:	-
Product Model:	_
Name & Address of Distributor/Dealer:	-
	-
	=
Distributor Phone Number:	-

FOR SAFETY, PLEASE READ THIS MANUAL PRIOR TO USE.



Godrej & Boyce Mfg. Co. Ltd.

Godrej Security Solutions

Regd. Office: Plant No.17, Pirojshanagar, Vikhroli, Mumbai - 400 079.

Toll-free: 1800 209 9955 (Sales) 1800 209 5511(Service)
Email: secure@godrej.com | Visit: www.godrejsecure.com

In view of the Godrej policy of continuous development and improvement, the dimensions and specifications may be changed without prior notice or obligation. The colours of the product in the leaflet may not match the actual colours due to printing limitations.

An ISO 9001:2015, ISO 14001:2015, ISO 45001:2018

Products Marketed and Serviced by Godrej and Boyce Mfg. Co. Ltd.