





Godrej Enterprises Group

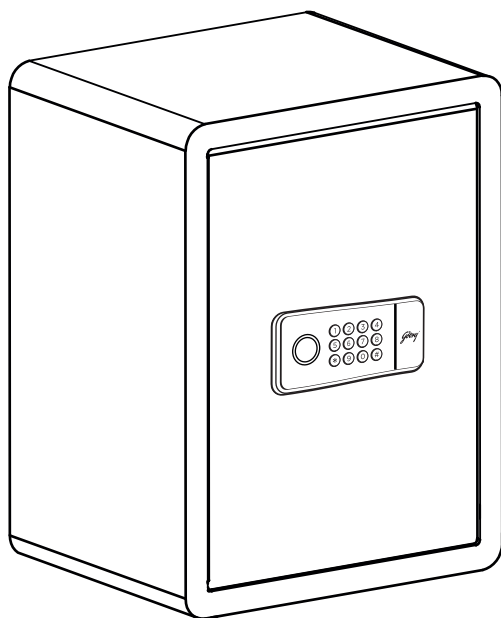

NX PRO Luxe

Usermanual

NX PRO Luxe

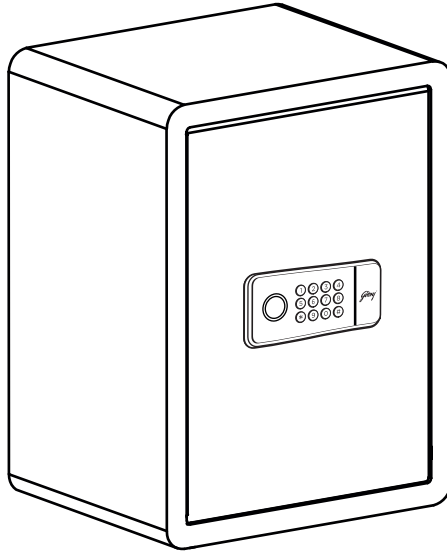

NX PRO Luxe

NX PRO Luxe is a compact, secure and affordable option to safeguard your precious possessions.

Ideal for



Daily use
valuables



10X Stronger* than a
Wooden Cupboard



Dual Mode Access
Digital + Biometric



Motorized Lock
for Enhanced Safety



Voice Based
Acknowledgment



Auto Door
Locking Mechanism



In-built
I-Buzz Alarm

*Reference to strength 10X stronger than a wooden cupboard is based on controlled in-house tests.

Model	Dimensions in cm (HxWxD)	Net weight (Kg.)	Volume (Ltr)
NX PRO Luxe_30L	33 x 40 x 35	20.9	30
NX PRO Luxe_48L	53 x 40 x 35	29.5	48

1. Important instructions

Please keep this manual and override keys in a safe place (**Not inside the locker**)

Make sure that the locker is **anchored** properly as there is a possibility that it can fall and hurt people or property.



Do not use any liquid while cleaning the keypad, you could use a damp cloth if required.



Do not place any liquid on top of the locker, a spill on the keypad may damage the locker inoperable.



Do not overstuff the locker or you may damage the motor mechanism or the contents.




Do not place the safe in direct sunlight in case of Biometric. For security purposes, you should change the factory default code i.e. Personal Code and Master Code as soon as possible.



Do not open the back cover or try to repair the locker yourself. In case of any problem contact GSS call center at **1800 20 999 55** or write to us at **secare@godrej.com**

Note: For security purposes, you should change the factory default code i.e. Personal code and master code as soon as possible. Godrej Security Solutions shall not be responsible for only theft caused by such negligence.


2. Package contents

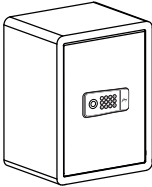

NX PRO Luxe (1)



 
1.5V AA Alkaline Battery (4)



Glass Shelf (1)



Mechanical Override Key (2)

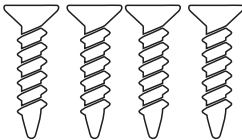

Anchoring Screw (4)




User Manual (1)



Warranty Card (1)

3. Know your product

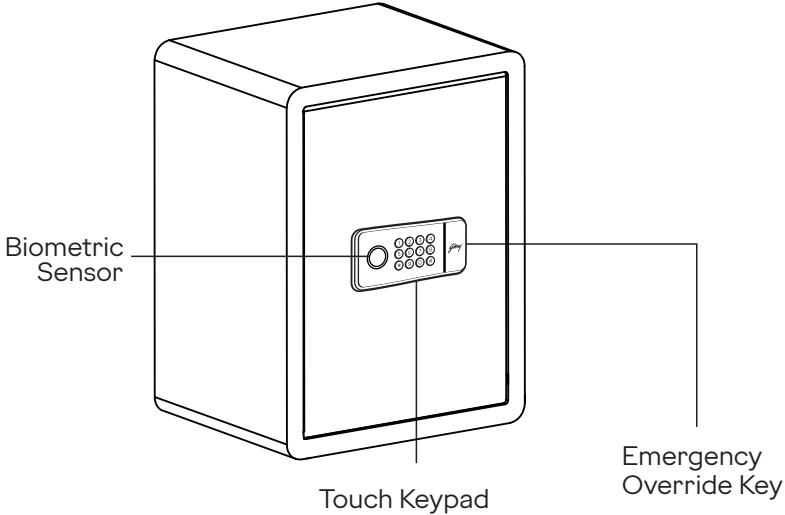

Note: SET button available at the back of the door on the top right corner.

4. Open your safe for the first time

To open the safe for the first time, use the emergency override key and follow the below sequence.

Insert the emergency override key and rotate it in an anticlockwise direction. Hold the key in this position.

Pull the door to open the safe.

Caution: After setting up fingerprints or passwords, remove the emergency key and store it in a secure location (not inside the safe).

5. Battery insertion

Open the door of the safe.

Locate the battery box on top right corner of the door.

Insert 4xAA 1.5V Alkaline batteries into the battery compartment.

6. Process to set user code/finger print

Open the safe door.

Press the **"SET"** button, and a voice prompt will ask you to either place your finger on the scan sensor or enter your user code.

Enter your 6-digit password and touch the **"#"** key or place your finger on the scanner.

The voice prompt will ask you to repeat the procedure. Repeat the same process.

Upon successful registration, you will hear the voice prompt **"registration complete."**

You can enrol up to 50 fingerprints and set 10 user codes (6 digits) using this procedure.

The default first user code is **123456**

Note: User code can not be set using repetitive numbers

(i.e. **111111, 222222, ...999999**) and it should not be same as the master code.

7. Process to set the master code

- Touch the button area when the backlight is **ON**.
- Touch the "*" button twice, then enter the existing master code and touch "#" key.
- You will hear a voice prompt asking you to enter a new master code. Enter the new 6-digit master code and touch "#" key.
- The voice prompt will ask you to repeat the process. Perform the operation again and touch "#" key.
- You will hear the announcement "**Operation Complete**". This indicates the successful change of the master password.
- The default Master code is **800000**.

Note: Please avoid using your safe in factory default mode, where the safe can be opened with any finger or the default (user/master)code. Godrej Security Solutions will not be responsible for any theft attempts.

8. Process to open/close the safe with register code/finger

- Place your registered finger on the sensor or enter your password, then touch "#" key.
- Upon successful verification, the safe will provide a voice prompt saying "**Verification Complete**", and the door will be unlocked automatically.
- To close the safe there is **auto closer logic, just close and hold the safe door to its last closing position till you hear "closed" as an acknowledgment from the safe.**
- In case of an incorrect fingerprint attempt, the fingerprint light will change from blue to red, and a voice announcement will declare "**Verification Failed**".
- For an incorrect password entry, the keypad light will blink twice, accompanied by a voice announcement of "**Verification Failed**".

Note: After 5 consecutive unsuccessful attempts with the wrong fingerprint or code, the system will go into a lockout mode for 5 minutes. The safe will voice prompt "**System Locked**", and the keypad light will blink slowly during this lockout period. Both the keypad and fingerprint sensor will remain deactivated for 5 minutes.

9. Dummy password function

- The Safe features a dummy password function.
- Touch the panel area to input a sequence of numbers up to a total length of 20 digits.
- Include the correct password string within the sequence. Conclude by touching the "#" key.
- The safe will respond with a voice prompt affirming "**Verification completed**" (verification).
- The safe will automatically initiate the opening process upon successful verification.
- Once the safe is successfully opened, a voice Prompt will announce "Opened."

10. Low battery alert

- If you open the safe door and hear a "**battery low**" prompt, promptly replace the batteries.
- In case the batteries are completely drained out, utilize a power bank or mobile charger to power the safe via the Type-C port.

11. Voice prompt on/off

- To deactivate the Voice prompt, input code "***554" and touch "#" key.
- To reactivate the voice prompt, input code "***554" and touch "#" key. You will receive the voice prompt "**operation complete**," indicating the restoration of the voice prompt feature.

12. I buzz (alarm) activation and sensitivity setting

- To modify I-buzz functionality or sensitivity, follow these steps after opening the safe:
 - Enter code "***9110" and touch "#" key to deactivate the alarm functionality.
 - Enter code "***9111" and touch "#" key to set alarm logic to high sensitivity.
 - Enter code "***9112" and touch "#" key to set alarm logic to medium sensitivity.
 - Enter code "***9113" and touch "#" key to set alarm logic to lower sensitivity.

Note: The factory default I buzz function is deactivated.

Caution: I buzz logic won't function when the safe door is left open.

13. Process to activate dual mode

- To change dual mode settings, it is mandatory to open the safe first.
- Enter "***551" and touch on "#" key. Then safe gives voice prompt as "please verify administrator".
- Use any registered finger or code for verification. After successful validation safe gives voice prompt as "**combination of opening method**". In combination mode, one of the 50 registered fingerprints and any 1 of the 10 set passwords can be used together to unlock the safe.
- To restore safe back from combination method to single method opening, Just repeat above procedure again. i.e Enter "***551" and touch on "#" key. Then safe gives voice prompt as "**please verify administrator**". Use any registered finger or code for verification. After successful validation safe gives voice prompt as "**single opening method**".

Note: Factory default safe is in "**single opening method**".

14. Process to deactivate door open overtime alert

- To disable logic for door open overtime beep, Enter **590 and then touch #.
- To enable logic for door open overtime beep, Enter **591 and then touch #.
- Factory default this door open overtime logic should be **ON**

Note: Factory default this door open overtime logic will be **ON**. Once the safe is open and kept open for 40 sec then door open overtime alert will be activated for **40 sec**.

15. Process to reset the safe

- Open the safe door first, press and hold the "**SET**" button for 5 seconds, till you hear long beep "**DiDiDi**", Then immediately release the "**SET**" button and you will hear "**reset complete**".

16. Mounting

Mounting through the back of the safe:

- Verify the structural integrity of the wall or cabinet.
- Enlist assistance to hold the safe during the mounting process.
- Check for hidden wires or pipes on the chosen location.
- Mark the wall or cabinet for drilling anchor holes.
- Drill holes of the appropriate size for the selected anchors.
- With someone holding the safe, anchor it securely to the wall.

Mounting tips:

- Choose either wall, cabinet, or floor mounting.
- Ensure that the selected wall or cabinet can support the safe's weight.
- Prioritize load-bearing capacity to prevent the safe from falling and causing damage or harm.

17. Replacing the batteries

- Open the safe using the registered fingerprint or password. If the batteries are dead, use the emergency override key or connect an external power source via the C-type USB port to open the safe.
- Remove the battery cover and remove all four used batteries.
- Replace the batteries with four 1.5V AA alkaline batteries.
- Put back the battery cover.
- Dispose the used batteries in an environmental friendly way.
- Keeping the door open and ensure safe working fine.

Note: C type USB provision is available near to emergency override to power on the safe in case the batteries drains out completely.

18. Emergency override key

In situations like receiving the safe for the first time or encountering emergencies such as battery depletion or a forgotten password, you can employ the following procedures:

- Insert the emergency override key and rotate it anti clockwise while holding it in that direction.
- Gently pull the door to open the safe.

Caution:

- Keep the emergency key outside the safe and accessible for emergency use only.
- Once the safe is open with emergency override key, It is recommended to factory default your safe and to set your new user/master code and enroll your finger again.

DISCLAIMER

Except as otherwise agreed upon by Godrej and Boyce Manufacturing Company Limited ("Godrej") and the Customer ("you"), Godrej expressly disclaims all other warranties related to the services provided in relation to the product, whether express or implied, including (without limitation) any warranty of merchantability or fitness for a particular purpose, or infringement or breach of any terms express or implied.

You agree that the products or services are provided to you on an "as -is" basis. You shall not assert any claims or initiate any legal proceedings against Godrej for any losses or damages, including indirect, consequential, incidental, punitive, pecuniary, or reputational damages, incurred by you through the use of the product. You agree that you are using this product voluntarily and read and understood these terms. Godrej does not warrant that all errors will be corrected. Godrej shall have no liability towards you for any losses or damage sustained by you whilst using the product, or as a result any claim or action brought or asserted against you by any third party. You agree to use this product in compliance with all applicable laws, and you are solely responsible for ensuring that your use conforms to the applicable law. Especially, you are responsible for using this product in a manner that does not infringe on the rights of third parties, including without limitation data protection and other privacy rights. You must not use this product for any purposes prohibited by applicable laws.

19. Information on e-waste handling and management

Dear Customer,

The Ministry of Environment and Forest and Climate Change have published The E-waste (Management) Rules 2022, which came into effect from 1st day of April 2023.

- E-waste means electrical and electronic equipment, including solar photo-voltaic modules or panels or cells, whole or in part discarded as waste, as well as rejects from manufacturing, refurbishment and repair process.
- These rules shall apply to every manufacturer, producer, refurbisher, dismantler and recycler involved in manufacture, sale, transfer, purchase, refurbishing, dismantling, recycling and processing of e-waste or electrical or electronic equipment listed in Schedule-I of the rules including their components, consumables, parts and spares which make the product operational but shall not apply to
 - (a) Waste batteries as covered under the Battery Waste Management Rules 2022
 - (b) Packaging plastics as covered under the Plastic Waste Management Rules 2016
 - (c) Micro enterprises as defined in the Micro, Small and Medium Enterprises Development Act, 2006
 - (d) Radio-active wastes as covered under the provisions of the Atomic Energy Act, 1962 and rules made thereunder.
- Under these rules, specific roles and responsibilities are defined for manufacturers, producers, bulk consumers, refurbishers and recyclers. Under Extended Producer Responsibility any producer of electrical or electronic equipment as given in Schedule-I for meeting recycling targets as per Schedule-III and Schedule -IV, only through registered recyclers of e waste to ensure environmentally sound management of such waste.
- E-waste is to be managed in an environmentally sound manner which means, taking steps to ensure that health and environment are protected from adverse effects of hazardous substance contained in such wastes.
- Rule 6 of the E-waste (Management) Rules 2022 inter alia states that the producer of electrical and electronic equipment listed in Schedule -I shall be responsible for creating awareness through, media, publications, advertisements, posters or by any other means of communication.
- Rule 16 of the E- Waste (Management) Rules 2022 states reduction in the use of hazardous substances in the manufacture of electrical and electronic equipment and their components or consumables or parts or spares and every producer shall comply with the requirements under the rule.
- All consumers of electrical and electronic equipment irrespective of their status as bulk consumers or not, shall ensure that e-waste generated by them is channelized through registered recyclers or is returned to the pickup/take back services provided by the producers and recyclers. **Please refer to our website <https://www.godrej.com/godrej-security-solutions#GreenThink> under the 'Green Think' section of Godrej Security Solutions Division Page for more details on registered recyclers and collection centers/pick up points of the company.**
- All our products intended to be recycled under the category of e-waste (as defined above) carry a label or stamp of the WEEE symbol (A wheellie bin with a cross), which states that it falls under the hazardous waste category and is not to be disposed of along with normal garbage.



We seek your support in ensuring environmentally sound management of e-waste and aid us in sustaining our earth's natural resources and maintaining the earth's green cover intact for the benefit of our future generations.

Record of purchase

Please fill your details below for future reference.

Date of purchase: _____

Product model: _____

Name & address of distributor/dealer: _____

Distributor phone number: _____

For safety, please read this manual prior to use.



Godrej & Boyce Manufacturing Company Limited
(A part of Godrej Enterprises Group)

Plant 17, Pirojshanagar, Vikhroli,
Mumbai – 400079, Maharashtra, India

Call: 080 - 6743 6743 (Service)

Toll free: 1800 209 9955 (Sales)

Whatsapp support: +91 9321665511 (Service)

Web: www.godrejsecure.com

Email: secure@godrej.com (Sales), secure@godrej.com (Service)

An ISO 9001:2015, ISO 14001:2015, ISO 45001:2018

Products marketed and serviced by Godrej & Boyce Mgf. Co. Ltd.