




Godrej Enterprises Group

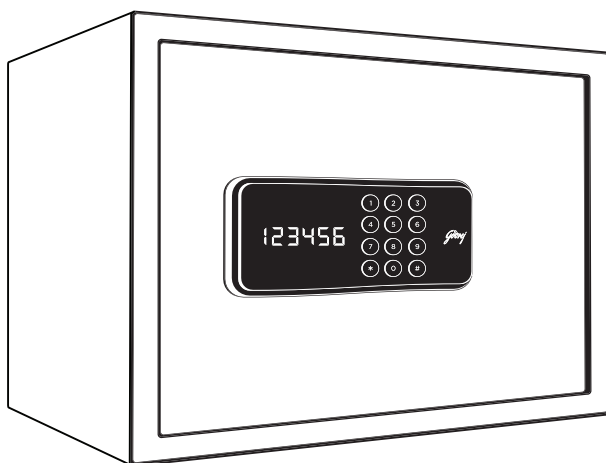


NX PRO Digital

Usermanual

This manual applies to both the NX Pro and Forte Pro series.

Safety of your valuables becomes paramount in today's fast paced and highly uncertain times. Precisely the reason we, at Godrej Security Solutions, have a range of Home Lockers that take care of your exact safety requirements. What's more, these lockers are 10X stronger and come with various cutting-edge safety features like Ultra Key, Digital or Biometric locking. Plus, you also get to choose the size of the locker that suit your needs, and then sit back and relax with the knowledge that your valuables are safe in a Godrej Home Locker.

NX PRO Digital

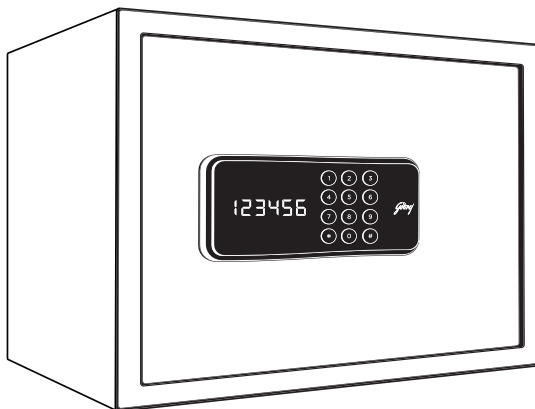

10X 10X *Stronger than a wooden cupboard



Unlocks with 4 to 6 digit password



Motorized lock for enhanced safety



Enabled with 6 digit master password



Low battery indicator



Auto freeze function



USB port & override key for emergency access




Compatible with i-buzz alarm

*Reference to strength as 10X stronger than a wooden cupboard is based on controlled in-house tests.

Table of contents

1.	Package contents	01
2.	Important instructions (to be missed at your own risk)	01
3.	Know your product	02
4.	Home mode operation	03
5.	How to change the personal code in home mode	03
6.	Hotel mode operation	04
7.	How to change the personal code in hotel mode	04
8.	Trick to change the master code	05
9.	Stop your code from being displayed and compromise security	05
10.	Hot key - viewing/not viewing password while keying in	06
11.	Testing the battery level	06
12.	Simple program to access the programming	06
13.	In case of emergency use the override key	09
14.	USB access - Technology always helps	09
15.	Free yourself from the error messages	10
16.	Replacing the batteries for uninterrupted security	11
17.	Installation manual	12
18.	Information on e-waste handling and management	16

1. Package contents

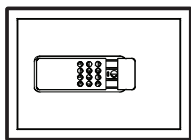

Locker (1)



Warranty card (1)



User Manual (1)



 
Mounting screws (4)



Override keys (2)






1.5V AA
Alkaline battery (4)



Interior carpet

2. Important instructions (To be missed at your own risk)

-  The locker is in Home Mode by default. To change the locker from Home mode to Hotel mode and vice verse, please follow instructions on the page number 12 in Section e **(6th Digit)** Operational mode.
-  Make sure the Locker is anchored properly as it can fall and hurt people and property.
-  Please keep this manual and override keys in a safe place **(not inside the locker)**.



DO NOT use any liquid while cleaning the keypad/ fascia.
You could use a damp cloth if required.



DO NOT place any liquid on top of the locker, a spill on the keypad/fascia may render the locker inoperable.



DO NOT overstuff the locker or you can damage the motor mechanism or the contents.



For security purposes, you should change the factory default code i.e. Personal Code and Master Code as soon as possible. Godrej Security Solutions shall not be responsible for any theft caused by such negligence.





DO NOT open the back cover or try to repair the locker yourself. In case of any problem contact our **Call Center at 080-6743 6743**


3. Know your product




Display

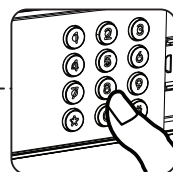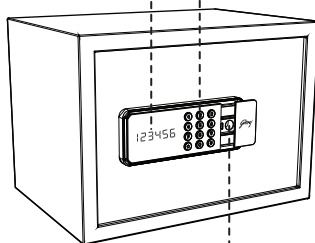

Keypad

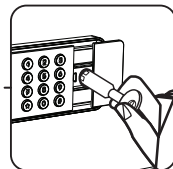

Mechanical
override key slot

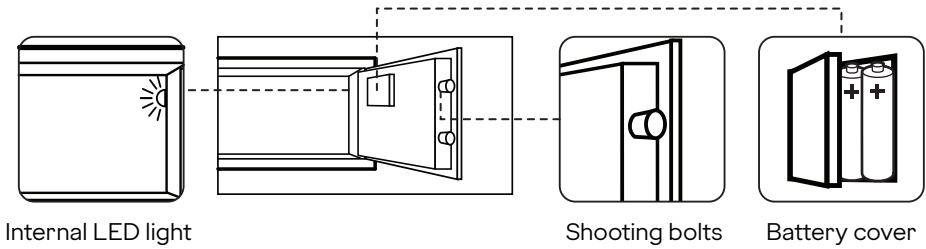

4. Home mode operation

-OPEN-
OPENED

To open the locker: Enter the personal code. When the display shows **OPEN**, the bolts will retract automatically. The display will show **OPENED** after the bolts have fully retracted.

Now, open the door by pulling from the bottom of the keypad.

CLOSE-
CLOSED

To lock the locker: Close the door and press # button. The display will show **"CLOSE"**, the bolts will extend automatically. After the bolts have fully extended, the display will show **"CLOSED"**.

Note: The Master code can only be used to unlock the locker.

5. How to change the personal code in Home mode

1. Open the locker.
2. Press * twice and the display will show PROG **PROG**
3. Press 68 # and the display will show NEU . **NEU**
4. Enter the new code and press #. That will Close the Locker.

Note: Default Personal Code is "1234".

6. Hotel mode operation

-OPEN-

To open the locker: Enter the personal code which was entered while locking the locker. The factory default personal code is **1234**. When the display shows **OPEN**, the bolts will retract automatically.

OPENED

After the bolts have fully retracted, the display will show **OPENED**. Now, open the door by pulling from the bottom of the keypad.

CLOSE-

To lock the locker: First, close the door and enter personal code and press **#** button. When the display will show **CLOSE**, the bolts will extend automatically.

CLOSED

The display will show **CLOSED** after the bolts have fully extended.

Note: The Master code can only be used to unlock the locker.

WARNING: In Hotel mode, you can unlock the locker only with the personal code entered during the last locking operation. The Locker will go on auto freeze mode, locking itself for 15 min. in case of consecutively 4 times of wrong password input. The duration time of locking can be set as per requirement.

7. How to change the personal code in Hotel mode

In Hotel Mode, every time you close the locker, you can enter a new personal code and press **#**. The locker will open with the last entered personal code only

8. Steps to change the Master code

Master code is available for unlocking in case the user code is forgotten

1. Open the locker.

PROG

2. Press * twice and the display will show, **PROG**. Then, enter the original Master code. The factory set Master code is **800000**.

NEU

The display will now show **NEU**.

AGA IN

3. Next, enter the 6-digit code of your choice. The display show **"AGAIN"**. Now, enter the code again and press # key to confirm.

DONE

4. The display will show **DONE** to indicate that the new Master code has been set up successfully.

WARNING: For security purposes, you should change the factory default code as soon as possible. Godrej Security Solutions shall not be responsible for theft caused by such negligence. Do not use Function code for the new Master code (EX:751019).

9. Stop your code from being displayed and compromise security

1. First, Open the locker using your Personal Code.

PROG

2. Press * twice and the display will show PROG.

3. When PROG disappears, press 751019 within 5 seconds.

171300

4. 171300 will appear. Now, with the first digit flashing press (0) then press # once. The display will go blank.

5. Close the locker (you will have to press your personal code to lock the door).

6. Check if this feature is activated by entering Personal Code, you will see that --- appears instead of your personal code.

10. Hot key-viewing /not viewing password while keying in

If your lock is set so that your code appears every time and you do not want it to appear for that one time, you can press **(0)** then **#** key before your code. Only dashes will appear for that one time. The next time you press your code, it will appear as usual.

Likewise, if your lock is set so that your code never appears, you can simply press **(9)** then **#** and your code will appear for that one time only.

This function applies to both modes **(Home Mode & Hotel Mode)**.

11. Testing the battery level

Test battery level.

You can test the Battery levels either with the door opened or closed.

Press**#** key

The display will show **"bA-HI"** or **"bA-LO"**.



"bA-LO" means that you need to replace the batteries.



12. Simple program to access the programming

Open the locker.

Press ***** twice, the display will show **PROG.**




Press **751019** while the word **PROG** disappears.



The current setup will appear with the first digit flashing.

All 6 sections must be entered within 10 seconds. You can change one or more sections, but all 6 sections must be entered. To keep a section programmed as it is currently set, simply press the same numbers that are currently displayed for that section and press **#**.

6. The display will go blank. 

To set up the different features listed below, you must first decide how you want the locker to function.

Section a (1st Digit) Code appearance on display

Press 0: If you DO NOT want your code to appear on the display (only dashes will appear) with beep sound when you press each key button.

Press 1: If you want your code to appear each time you press your code and then flash for verification one time, with beep sound when you press each key button. **Press 2:** If you want your code to appear each time you press your code, with beep sound when you press each button **(Default)**.

Section b (2nd Digit) Preferred number of digits in your code

Personal code can be **4-6 digits**.

Press 4: To use a 4-digit code.

Press 5: To use a 5-digit code.

Press 6: To use a 6-digit code.

Press 7: To choose the length of code **(4-6 digits)** when you set the code **(Default)**

Section c (3rd Digit) Lockout delay

If the wrong code is entered 4 times in a row, the touch pad will shut down for a length of time that you set.

This is to deter someone from opening your locker by keying in a random number. You must pick one of these three options:

Press 0: For no lockout delay.

Press 1: For a 15 minute delay (Default).

Press 2: For a 30 minute delay.

Section d (4th Digit) Master code

The Master code will open the locker if you happen to lose the code and override keys.
The Master code is preset at the factory.

Press 2: To turn OFF the Master code feature.

Press 3: To turn ON the Master code feature **(Default)**.

Section e (6th Digit) Operational mode


This feature allows you to change how the locker operates, either for Home mode or Hotel mode.

Press 0: To set for Home Mode (Default).


Press 1: To set for Hotel Mode.

Press # once to exit Program Mode.


13. In case of emergency use the override key

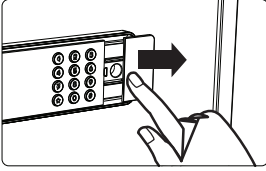

1. Open the keyhole.

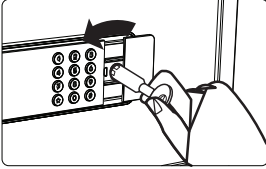

2. Use one of the override keys and insert it into the cylinder.
Turn anti-clockwise to open the locker

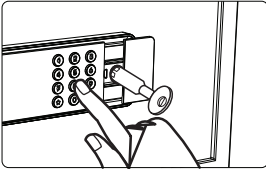


3. While the door is open and the key is still turned, follow the instructions to set your personal code

Note: When you set the new personal code, rotate the key to the locked position, so that it can be removed. If you get an error message, wait until the motor stops moving and then turn the key back to locked position and remove it. Your new personal code will still remain.

WARNING: Keep the override keys in a safe place other than inside the locker. These keys are to be used in case of emergency. If you open the locker using the override mechanical key/emergency key, it is strongly recommended to change both your user code and master code immediately for security reasons.

14. USB Access - Technology always helps

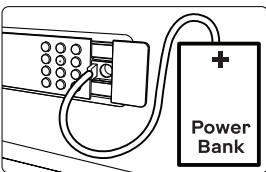

In case of low battery, a regular USB wire connected to a power bank can be inserted in the slot available on the lock panel. This will energise the locker by using power from the USB source*. The user can then enter the code, unlock the locker and replace the battery.

*This does not charge the locker batteries. You will still need to replace batteries

15. Free yourself from the error messages

Listed below are errors codes that you might encounter:

Error

This means that you have pressed an incorrect personal code. You need to Verify your personal code and try again. If you get this error four times consecutively, the keypad will lock out for 0/15/30 minutes.

HOLD 15

This means that the locker has entered the lockout period. You will not be able to open the locker during the lockout period. However, by pressing any key during this period you can see how much time is left until the lockout is over. If your personal code still doesn't work, use the override keys to reset the locker. (see "**To access the programming**" section 3).


Error 1

This means that the bolts have failed to retract fully. To rectify the error, Press the door towards the inside while entering your personal code. If you still cannot open your locker, then contact GSS Call Center on **080-6743 6743** or write to us at **secure@godrej.com**


Error 2

This could also mean that the bolts have failed to extend fully. This may happen because the locker is too full. To correct the error, Press the door to close it fully while pressing your personal code. If you still cannot close your locker then contact the GSS Call Center on **080-6743 6743** and consider it done.

16. Replacing the batteries for uninterrupted security

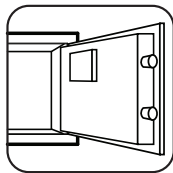

1. Open the keyhole.

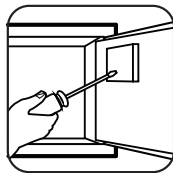


2. Remove the battery cover by unscrewing the back panel.




3. Remove all the four used batteries.




4. Replace the batteries with four 1.5V AA size alkaline batteries.

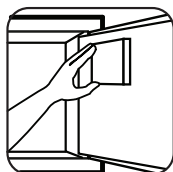

5. . Put back the battery cover

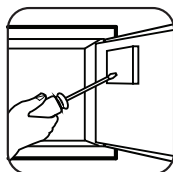

6. Put back the screws to secure the battery cover

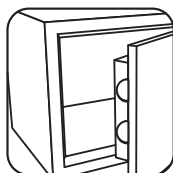

7. Keeping the door open, test the locker to make sure it works perfectly fine.




8. **V.IMP.** Dispose the used batteries, in an environmental friendly way.

Installation Manual



Tools required

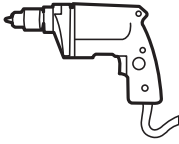


Drill Machine



Spirit Leveler



Spanner

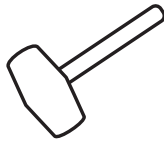


Mallet




Drill Bits


Mounting - Do it right keep trouble out

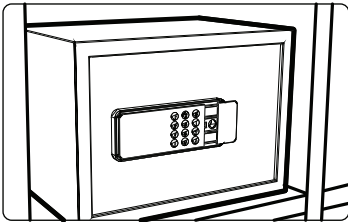


1. Use the spirit leveler to check if the locker is evenly placed on the ground or against the wall or inside the wardrobe (depending on where it is to be grouted). In case it's not even then choose a different location for grouting.

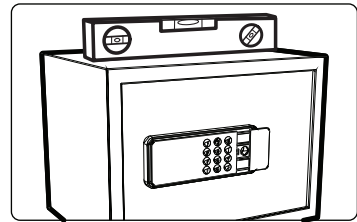


2. To make your work easy the Spirit leveler lets you know precisely if the locker is evenly placed

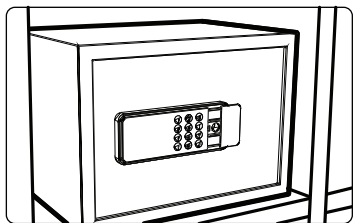


3. Next, make markings on the ground or the wall or inside the wardrobe through the holes inside the locker.

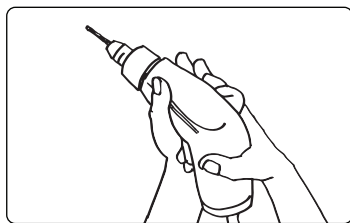

4. Then, Drill holes into the ground or the wall or the inside of the wardrobe.

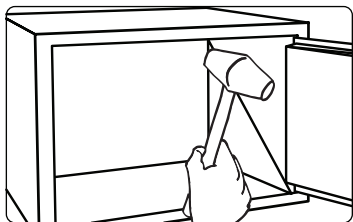


5. Fix the locker firmly by hammering the anchoring bolts (provided in the kit) through the holes.

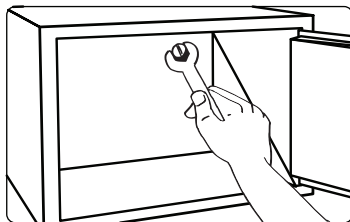


6. Finally, tighten the anchoring bolts with a spanner and it's done.

Mounting tips

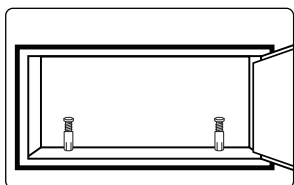

The locker may be either mounted to a wall or the inside of a cabinet or on the floor.

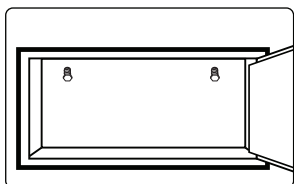

When mounting to a wall or cabinet, be sure of the load bearing capacity so as to hold the weight of the locker and its contents. (Negligence in proper mounting could result in the locker falling and causing damage to property and people.)

Mounting through the bottom of the locker:

Check the exact type of floor, whether it's wood, tile, concrete or anything else.

Get the appropriate anchors for the particular type of floor

Check and mark the location on floor for concealed wires or pipes

Drill the appropriate size hole for your anchors

Once done, mount the locker and make sure that it is secure to the core.

You can even mount on the top of a cabinet. For that you may want to use carriage bolts through the top of the cabinet.

DO NOT mount the locker on a shelf in a cabinet or closet without anchoring to a wall behind the locker for optimum safety

Mounting through the back of the locker:

To begin with, check the wall or cabinet and ensure that they are structurally strong.

Request someone to help you in holding the locker during mounting.

Check the exact location for concealed wires or pipes

Mark the surface and drill holes for the anchors you will be using.

Have someone hold the unit and then anchor the locker to the wall

To ensure the installation, test the strength of the mounted locker so that it will not fall off the wall or cabinet

DO NOT place the locker on a shelf unless it's proper mounting into a wall

DISCLAIMER

Except as otherwise agreed upon by Godrej and Boyce Manufacturing Company Limited ("Godrej") and the Customer ("you"), Godrej expressly disclaims all other warranties related to the services provided in relation to the product, whether express or implied, including (without limitation) any warranty of merchantability or fitness for a particular purpose, or infringement or breach of any terms express or implied.

You agree that the products or services are provided to you on an "as-is" basis. You shall not assert any claims or initiate any legal proceedings against Godrej for any losses or damages, including indirect, consequential, incidental, punitive, pecuniary, or reputational damages, incurred by you through the use of the product. You agree that you are using this product voluntarily and read and understood these terms. Godrej does not warrant that all errors will be corrected. Godrej shall have no liability towards you for any losses or damage sustained by you whilst using the product, or as a result any claim or action brought or asserted against you by any third party. You agree to use this product in compliance with all applicable laws, and you are solely responsible for ensuring that your use conforms to the applicable law. Especially, you are responsible for using this product in a manner that does not infringe on the rights of third parties, including without limitation data protection and other privacy rights. You must not use this product for any purposes prohibited by applicable laws.

18. Information on e-waste handling and management

Dear Customer,

The Ministry of Environment and Forest and Climate Change have published The E-waste (Management) Rules 2022, which came into effect from 1st day of April 2023.

- E-waste means electrical and electronic equipment, including solar photo-voltaic modules or panels or cells, whole or in part discarded as waste, as well as rejects from manufacturing, refurbishment and repair process.
- These rules shall apply to every manufacturer, producer, refurbisher, dismantler and recycler involved in manufacture, sale, transfer, purchase, refurbishing, dismantling, recycling and processing of e-waste or electrical or electronic equipment listed in Schedule-I of the rules including their components, consumables, parts and spares which make the product operational but shall not apply to
 - (a) Waste batteries as covered under the Battery Waste Management Rules 2022
 - (b) Packaging plastics as covered under the Plastic Waste Management Rules 2016
 - (c) Micro enterprises as defined in the Micro, Small and Medium Enterprises Development Act, 2006
 - (d) Radio-active wastes as covered under the provisions of the Atomic Energy Act, 1962 and rules

made

thereunder.

- Under these rules, specific roles and responsibilities are defined for manufactures, producers, bulk consumers, refurbishers and recyclers. Under Extended Producer Responsibility any producer of electrical or electronic equipment as given in Schedule-I for meeting recycling targets as per Schedule-III and Schedule -IV, only through registered recyclers of e waste to ensure environmentally sound management of such waste.
- E-waste is to be managed in an environmentally sound manner which means, taking steps to ensure that health and environment are protected from adverse effects of hazardous substance contained in such wastes.
- Rule 6 of the E-waste (Management) Rules 2022 inter alia states that the producer of electrical and electronic equipment listed in Schedule -I shall be responsible for creating awareness through, media, publications, advertisements, posters or by any other means of communication.
- Rule 16 of the E- Waste (Management) Rules 2022 states reduction in the use of hazardous substances in the manufacture of electrical and electronic equipment and their components or consumables or parts or spares and every producer shall comply with the requirements under the rule.
- All consumers of electrical and electronic equipment irrespective of their status as bulk consumers or not, shall ensure that e-waste generated by them is channelized through registered recyclers or is returned to the pickup/take back services provided by the producers and recyclers. **Please refer to our website <https://www.godrej.com/godrej-security-solutions#GreenThink> under the 'Green Think' section of Godrej Security Solutions Division Page for more details on registered recyclers and collection centers/pick up points of the company.**
- All our products intended to be recycled under the category of e-waste (as defined above) carry a label or stamp of the WEEE symbol (A wheelie bin with a cross), which states that it falls under the hazardous waste category and is not to be disposed of along with normal garbage.



We seek your support in ensuring environmentally sound management of e-waste and aid us in sustaining our earth's natural resources and maintaining the earth's green cover intact for the benefit of our future generations.

This image shows a single page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, leaving small margins at the top and bottom. There are no vertical margin lines, text, or other markings on the page.

[illegible]

[illegible]

Record of purchase

Please fill your details below for future reference.

Date of purchase: _____

Product model: _____

Name & address of distributor/dealer: _____

Distributor phone number: _____

For safety, please read this manual prior to use.



Godrej & Boyce Manufacturing Company Limited
(A part of Godrej Enterprises Group)

Plant 17, Pirojshanagar, Vikhroli,
Mumbai – 400079, Maharashtra, India

Customer Care: 080 - 6743 6743

Toll free: 1800 209 9955 (Sales)

Whatsapp support: +91 9321665511 (Service)

Web: www.godrejsecure.com

Email: secure@godrej.com (Sales), secare@godrej.com (Service)

An ISO 9001:2015, ISO 14001:2015, ISO 45001:2018
Products marketed and serviced by Godrej & Boyce Mgf. Co. Ltd.